

Engine 457, 458, 460, 470, 471, 472, 473, 541, 542, 941, 942


Verwendung in FG 01/03/Satz B

Purpose:

Extraction and insertion tool to remove the radial shaft sealing ring or cassette-type sealing ring on the crankshaft at the front.

Note:

Only in combination with W 457 589 01 33 00 pulling out device .

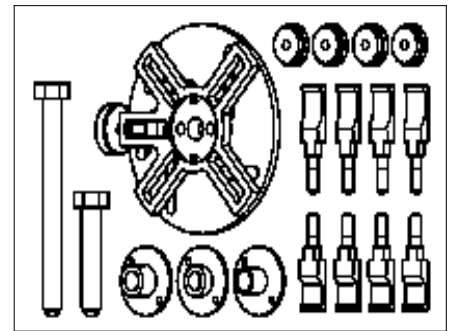

700 589 08 43 00