



H.C.B-C1850

AUTOMOTIVE U-JOINT PULLER



Safety Warning

Read all instructions and safety warnings prior to operation. Failure to do so could result in equipment damage, personal injury or even death.

NOTE: hammering this tool will void your warranty.

1. Remove all fasteners from bearing cups.
2. Slip the U-Joint Puller over the yoke of the drive line.
3. Turn the tool's forcing screw clockwise with up to a 1" impact wrench.

Note: Reverse threads, bottoming out forcing screw on frame may cause unwarrantable damage to threads.

Provides ultimate brute strength for disassembling even the most seized u-joints in minutes on virtually all cars, light-duty trucks and farm machinery.

Manufactured from high-grade materials for strength and durability

Eliminates dangerous vice-and-socket or hammering methods

Reduces risk of damage to the driveshaft, yokes, joints or bearing cups

Application

U-joints with bearing cups 1" to 1.25" O.D.

Note

Damage to flange style yokes may occur if bearing cups are severely seized

Not compatible with Double Cardan joints.